


Touch-up for Faux Wood Beams, Mantels, L-Headers and Planks

Tools and Materials:

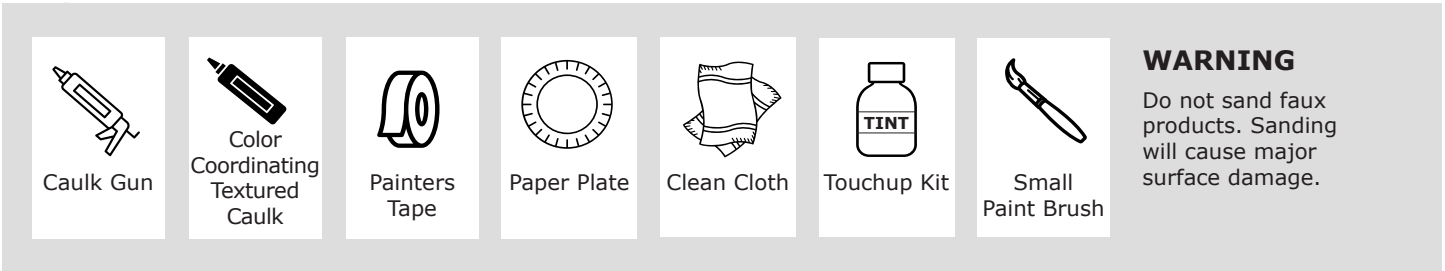

1 Apply

Apply color complimenting textured caulk to fill screw holes. Blend caulk into adjacent surfaces while it is still wet. Where necessary, apply caulk to joints and gaps.

HINT: Apply painters tape where the beam and wall meet to ensure a straight caulk line.

2 Dry

Allow caulk to dry.

3 Blend

Blend the caulk into the beam by painting it with Tint from the touch-up kit.

4 Remove

If painters tape was used, remove it after 24 hours or when caulk is completely dry.