


Panels

Ledgers and Trim - Interior or Exterior

Installation Instructions

General Tools and Materials:

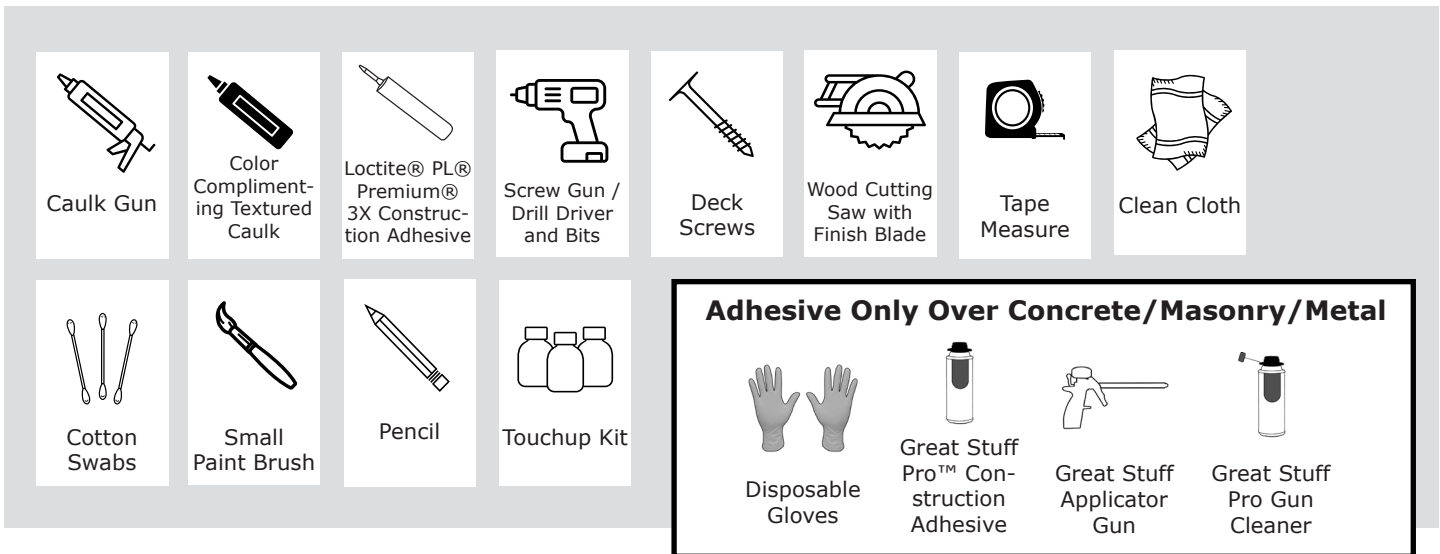

Before You Start

- Ensure surfaces are structurally sound and in good condition. Surfaces such as drywall should be flat and smooth to minimize gaps.
- Acclimate all materials by storing them flat in the installation location (but away from moisture and direct sunlight or other heat sources) for at least 24 hours.
- Gather all tools and materials.

WARNINGS:


- Be sure to obey all safety rules and recommendations set forth by tool manufacturers.
- Follow local building and fire codes.
- Wear safety glasses during the entire installation process.

1 Plan the Installation

Determine the lay out of the trim pieces.

NOTES:

- Window and door trim needs to be installed prior to installing panels.
- Ledger trim is to be installed after panel installation is complete.
- For exterior installations flashing needs to be installed prior to adding the trim pieces.

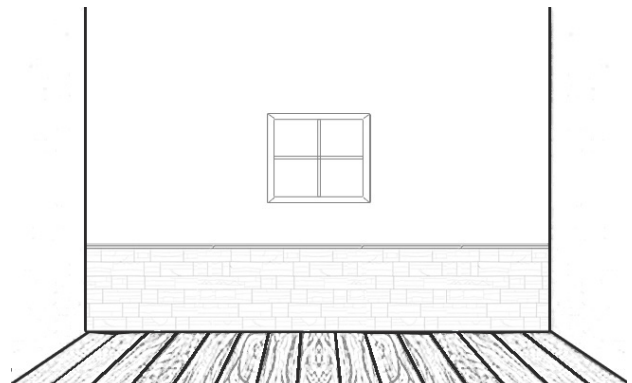

Ledgers and Trim - Interior or Exterior

2 Cut Trim

1. Measure, mark and cut the trim as needed.
2. To create a visible grout line, cut an additional 1/16 inch off of the trim.




Tape Measure



Wood Cutting Saw with Finish Blade



Pencil

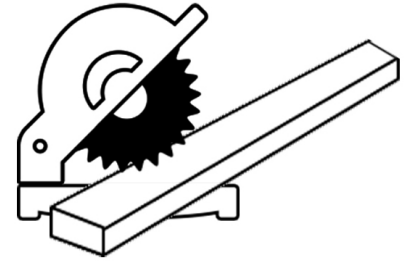


3 Dry Fit

Lift the trim to the installation location and ensure it fits as desired.

NOTES:

- Window and door trim is to be Installed prior to installing panels.
- Ledger trim is to be installed after panel installation is complete.
- For exterior installations flashing needs to be installed prior to adding the trim pieces.

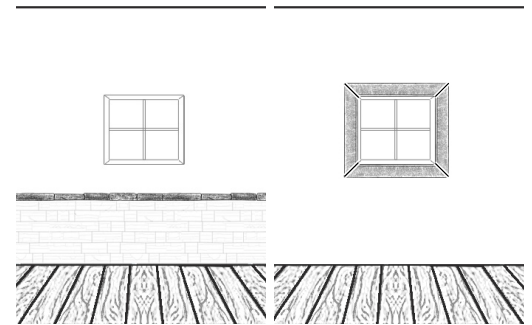


4 Prepare Surface

Clean surfaces are required for proper adhesion. Wipe the walls and the back of the trim with a tack cloth to remove any dirt or sawdust.



Clean Cloth

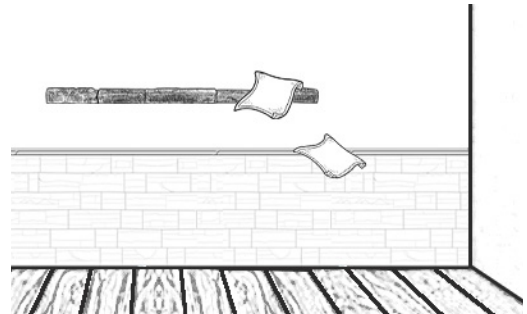

5 Apply Adhesive

Apply two beads of adhesive to the back of the trim.



Caulk Gun



Loctite® PL® 3X



Adhesive-only Installation Over Concrete/Masonry/ Metal

Wearing gloves and following the instructions on the Great Stuff Pro™ Construction Adhesive canister, apply two beads of Great Stuff Pro™ Construction Adhesive to the back of the trim.



Disposable Gloves



Great Stuff Pro™ Construction Adhesive



Great Stuff Applicator Gun

Ledgers and Trim - Interior or Exterior

6 Apply Caulk (Ledger Installation Only)


Apply a bead of caulk to the edge of the panel.



Caulk




Caulk Gun

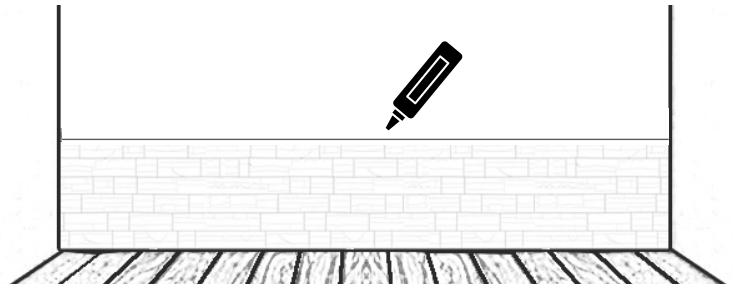

7 Install Trim Pieces


1. Set trim piece in place. Use a slight twisting motion to ensure good contact between the adhesive on the trim and the wall. For adhesive-only installation manually hold the trim in place until the adhesive sets.
2. Fasten the trim to the wall by placing a screw every 16 inches or as needed. Slightly recess the screw, do not over tighten. For window/door trim screws can be hidden if "toe-screwed" in from the sides or top and bottom.
3. Be sure to leave a small gap between pieces if a grout line is desired.

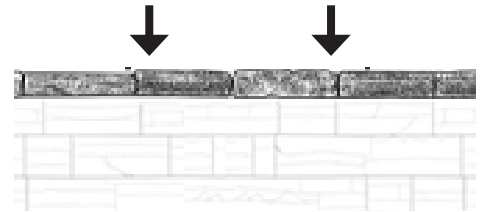

Screw Gun / Drill Driver



Deck Screws

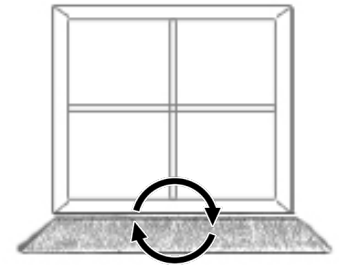

8 Apply Caulk


1. Add color coordinating textured caulk to the seams where trim pieces meet.
2. For exterior installations, place a bead of caulk between the trim and the wall.



Caulk




Caulk Gun

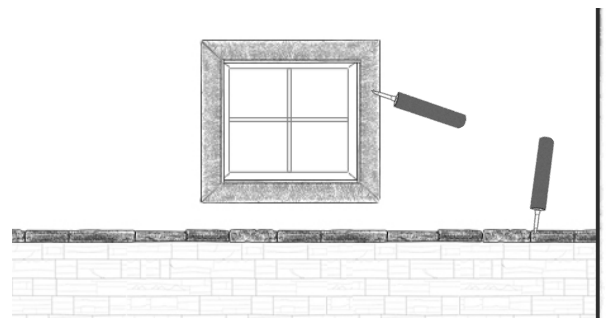

9 Touch-Up

1. Add color coordinating textured caulk to fill screw holes.
2. Use a damp cloth to remove any excess caulk, paying close attention to all seams.
3. If desired, use the paint from the touch-up kit to further conceal screw holes.

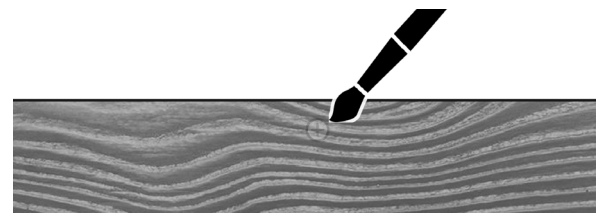

Small Paint Brush



Clean Cloth



Caulk



Caulk Gun



Touch-Up Kit